


K.A.T.

Vox VBM1 Speaker Modification

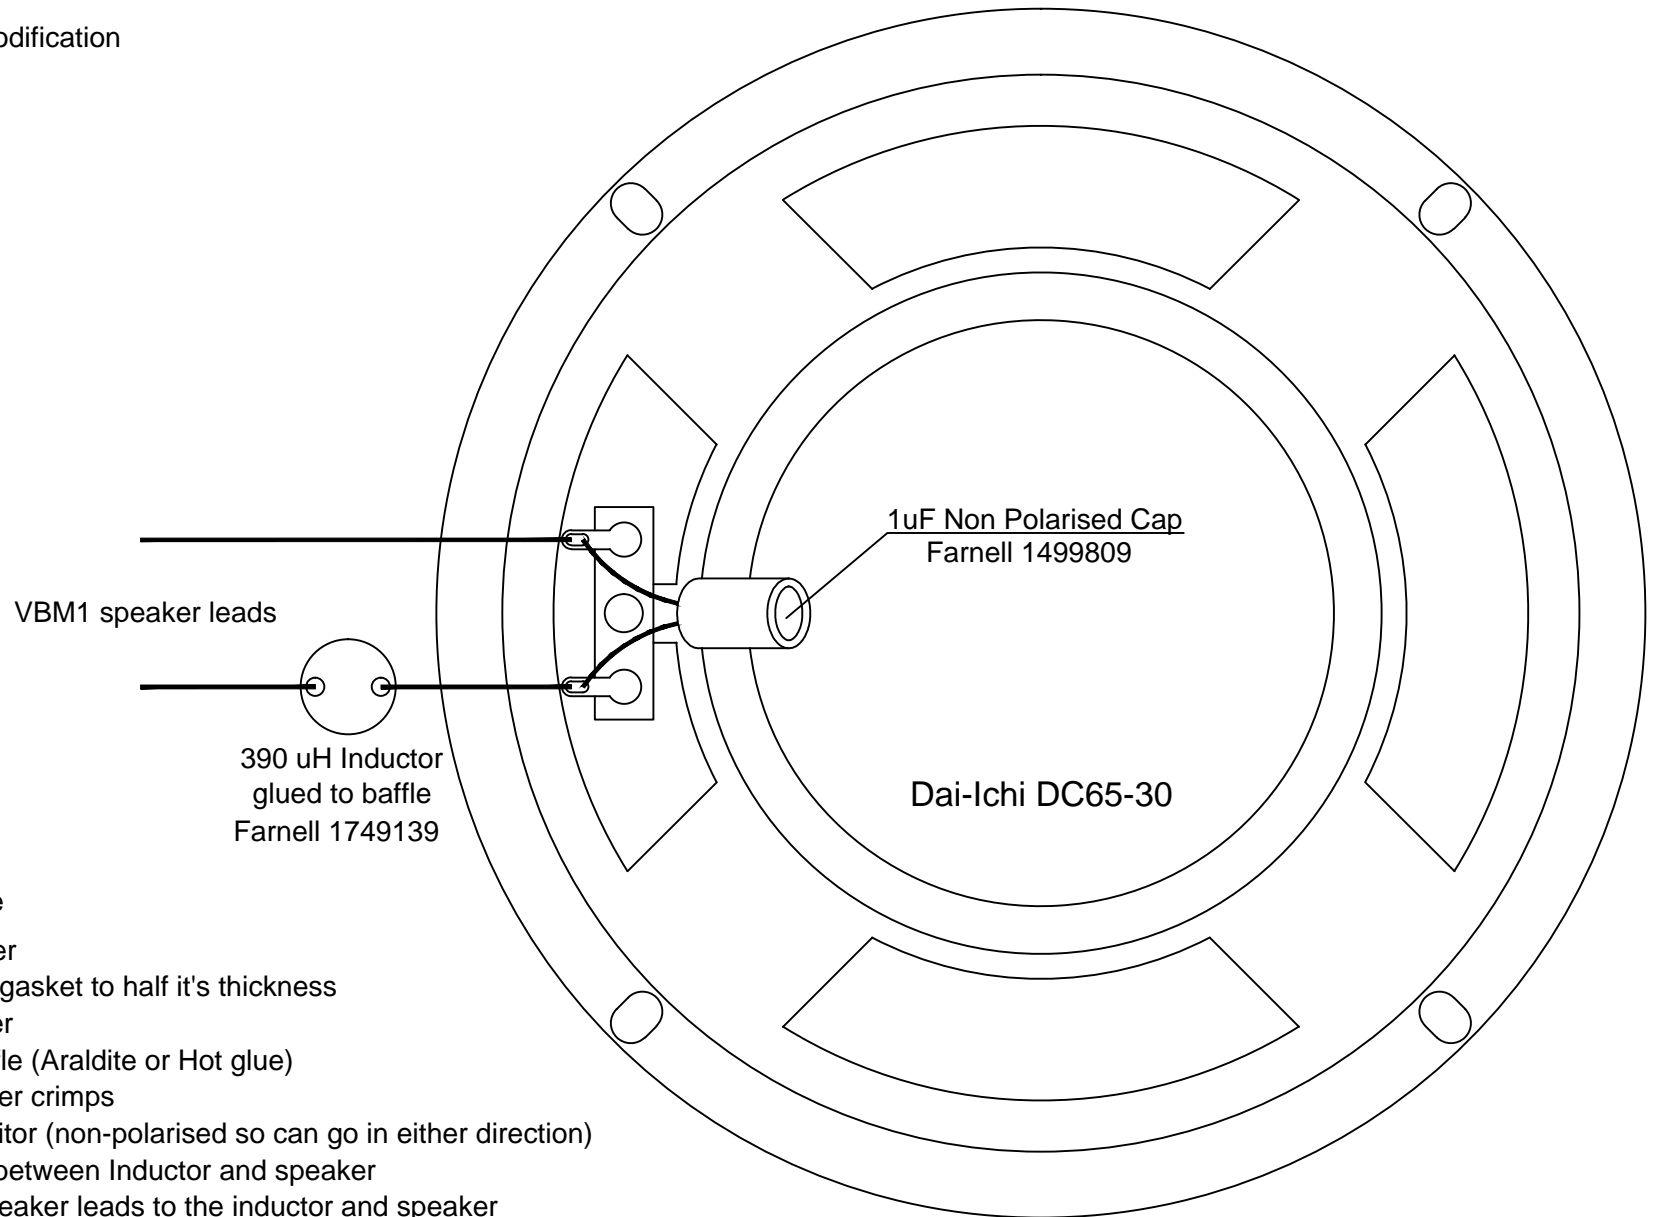

Modification Procedure

1. Remove Old Speaker
2. Trim DC65 speaker gasket to half it's thickness
3. Install DC65 Speaker
4. Glue inductor to baffle (Araldite or Hot glue)
5. Cut off VBM1 speaker crimps
6. Solder on the capacitor (non-polarised so can go in either direction)
7. Solder the link wire between Inductor and speaker
8. Solder the VBM1 speaker leads to the inductor and speaker